

WARNING!

READ CAREFULLY! **INSTRUCTION, CARE & MAINTENANCE GUIDE** **Model # 541R & 541NYCR – Right side opening** **Class II Fire Service Harness**

Warning

All employees/users of this device must be properly trained. It is the responsibility of the employer/department to provide training prior to use. Training must be performed by a qualified instructor who is knowledgeable in all aspects of the device including but not limited to proper adjustment, connection, wearing, deployment and inspection. If you need assistance finding a qualified instructor, please contact Gemtor.

You must read and fully understand all supplied instructions and information, or have all instructions and information explained to you, before attempting to use this equipment. Equipment must not be installed, operated or inspected by anyone who does not understand this Owner's Manual. Failure to observe these instructions could result in serious injury or death. Careless or improper use of this equipment can result in serious injury or death. This equipment is intended for use only by those who are thoroughly trained in its use and care.

Training and instruction review should be repeated at regular intervals. If you have any questions regarding these instructions or need additional copies, call Gemtor, Inc. at 1-800-405-9048.



GEMTORTM

*... when your life is on the line*TM



One Johnson Ave • Matawan, NJ 07747
(732) 583-6200 • Fax (732) 290-9391
www.gemtor.com • sales.info@gemtor.com

I. IMPORTANT INFORMATION

Additional information regarding life safety harnesses can be found in NFPA 1500, *Standard on Fire Department Occupational Safety and Health Program*, and NFPA 1983, *Standard on Fire Service Life Safety Rope and System Components*.

 
- Inspect the harness every month and before and after each use.
- Remove the harness from service and destroy it if the harness does not pass inspection or if there is any doubt about the safety or serviceability of the harness.
- **DO NOT** expose the harness to flame or high temperature
- Carry the harness where it will be protected, exposure to flame or high temperature may cause the harness to melt or burn and lead to failure.
- **DO NOT** attempt to use a harness that does not fit properly, replace it with the correct size.
- **DO NOT** attempt to repair or modify the harness. For prompt service, please contact: Gemtor, Inc.
- Keep all instructions/information supplied with the harness after it is separated from the original packaging in your personnel/training files.
- Make a copy of all supplied instructions/information and keep with the harness at all times.
- Refer to all supplied instructions/information before and after each use.

II. CAUTIONS



Items subjected to **FALL ARREST** or **IMPACT FORCES** must be immediately removed from service and destroyed. Any item showing **EXCESSIVE WEAR OR DETERIORATION** shall be destroyed. Inspect all equipment before each use. Failure to observe proper inspection and usage procedures could result in **INJURY** or **DEATH**.

ENVIRONMENTAL HAZARDS must be considered in selecting the appropriate equipment. Recommendations where chemicals, high temperature or other unusual conditions exist may be addressed to Gemtor, Inc.

III. DONNING

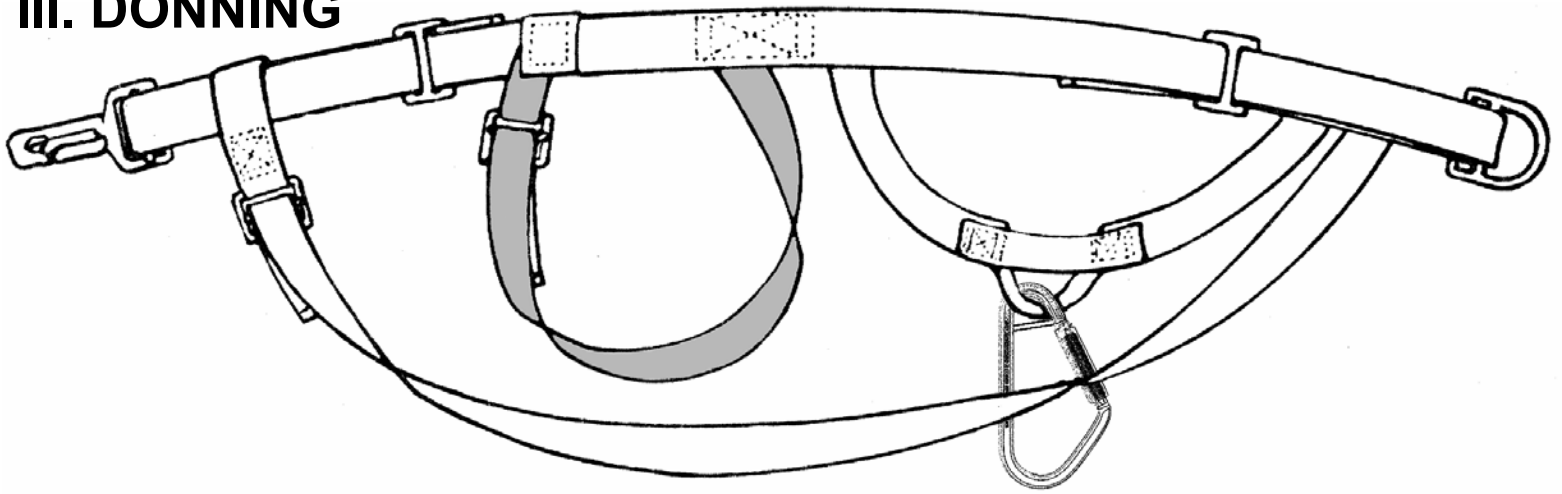

  1. Hold Harness in front of you, D-ring in right hand, snaphook in left hand.
2. Place left leg through small blue strap loop (shaded, above). Make sure large blue loop is behind left leg.

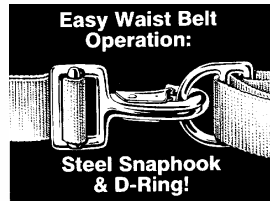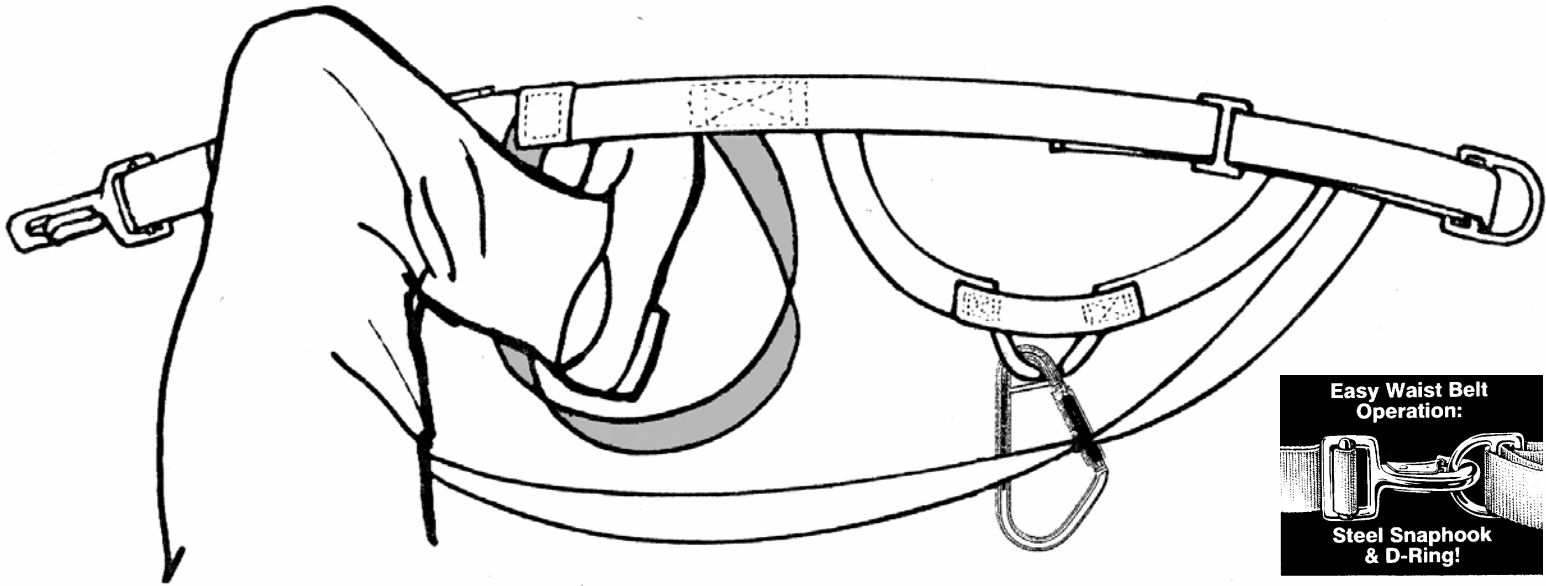

3. Pull harness up to waist. Bring snap hook around back and snap into D-ring. Adjust belt to waist size by pulling yellow adjustment straps near snaphook and D-ring.
4. Pull two blue cinch straps in rear to tighten leg straps.

IV. INSPECTION

Users shall establish their own formal routine inspection according to prevailing conditions with a minimum of one formal inspection each month. Visual inspection is required before each use, for mildew, wear, frayed edges, damage and other deterioration. Defective components shall be removed from service.

1. Buckles, D-rings, and snaphooks shall not be distorted, nor have any sharp edges, burrs, cracks, worn parts or corrosion. Make sure buckles work freely. The snaphook gate spring shall provide tension to keep the snaphook gate in a closed position; it shall close flat against the snaphook and exhibit no sideways movement or play.
2. All webbing shall be free of frayed or broken fiber, pulled stitches, tears, abrasions, mold, burns or discoloration.

NOTE: THE PRECEDING INSPECTION PROCEDURES ARE A MINIMAL METHOD OF INSPECTION. THE INSPECTION PROCEDURE MUST REFLECT THE USE APPLICATION.

